

The clock Set up guide

The push of the M (mode) button selects the parameter that should be set, and the push of the S (set) button sets the selected parameter.

Each push of the M button changes the type of parameter. The first push sets the hours (the first pair of indicators that shows the hours will light up), the second push sets the minutes (the second pair of indicators that shows the minutes will light up), and so on according to the table below.

The setting of the clock is considered completed, if after the consequent push of the M button the clock starts to flip through the digits from 0 to 9.

Set up hours		Set up minutes
Number of the month		Month
Year (00-99 -> 2000-2099)		Time adjustment
Turn on Date auto-display	0 = 24-time display mode 1 = 12- time display mode	Turn on/off back lights
Turn on cathode anti-poison routine	Turn on sound alarm (general)	Turn on sound alarm of each new hour
Set up hours of alarm clock		Set up minutes of alarm clock

Miscellaneous

1. Backlight modes:

0 - backlight is off;

1 - backlight is always on;

2 - backlight is on during specific time, from 6 to 23 o'clock;

3 - backlight is on only at night, from 22 to 6 o'clock.

2. If the alarm clock is deactivated, the setting items of hours and minutes of the *alarm clock* are not displayed.

3. The adjustment of time and date is performed *simultaneously*. In this case, seconds are set to zero by default. This should be taken into account when setting the exact time. Also, if the time and date were not set during setting up routine, the system *does not* perform adjustment of time and date.